


Sprchové dveře

KOMFORT T2



A



B



C



D

E




F



G

1

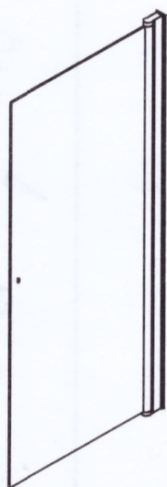

[1] x2



[2] x2




φ2.8

[3] x1




[4] x2

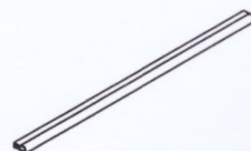

[5] x1



[6] x2

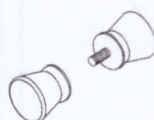

[7] x2



[8] x6




[9] x6



[10] x6




[11] x6

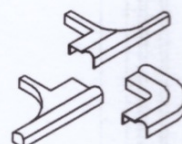


[12] x1

1


step1:

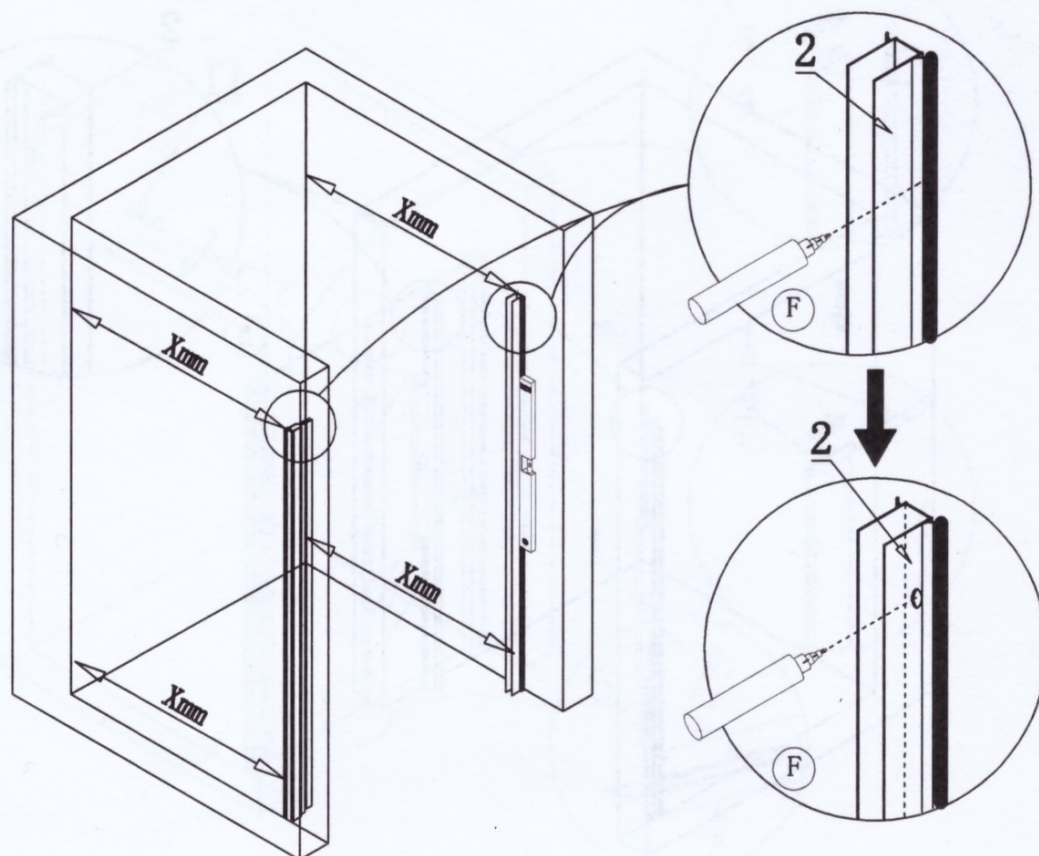


step2:

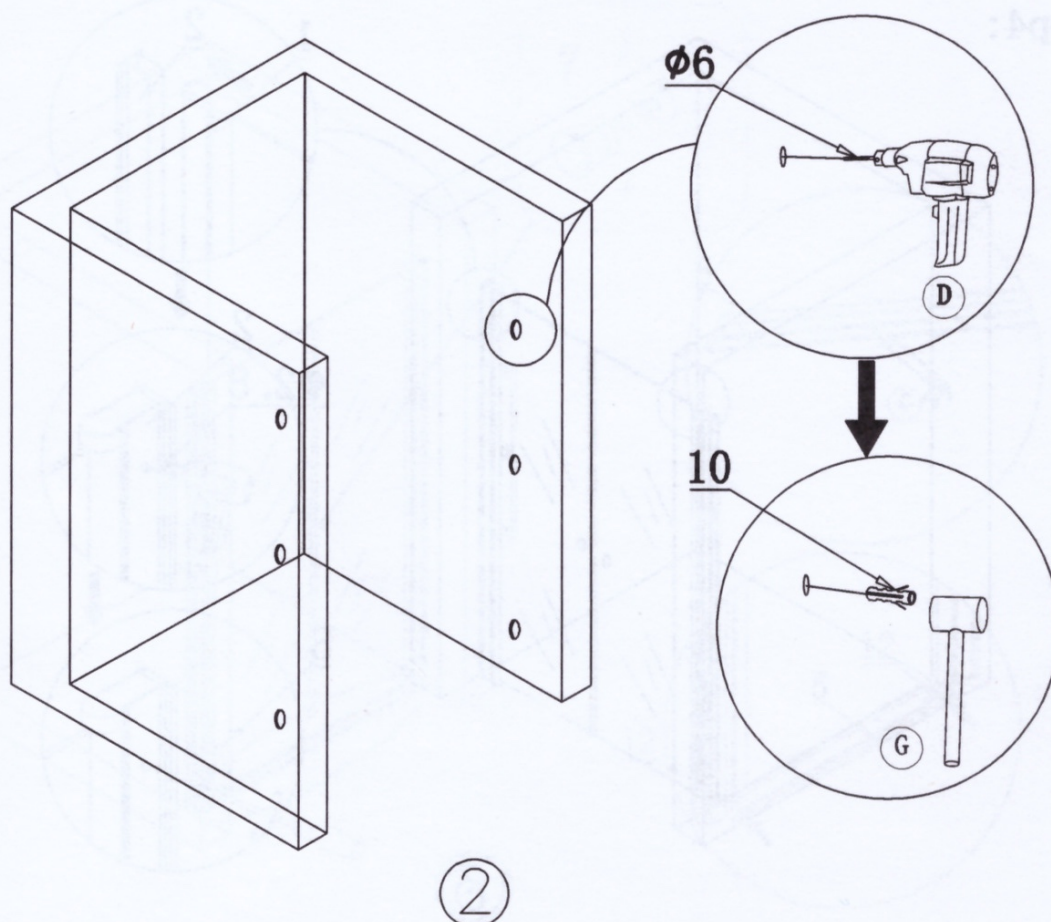


step3:

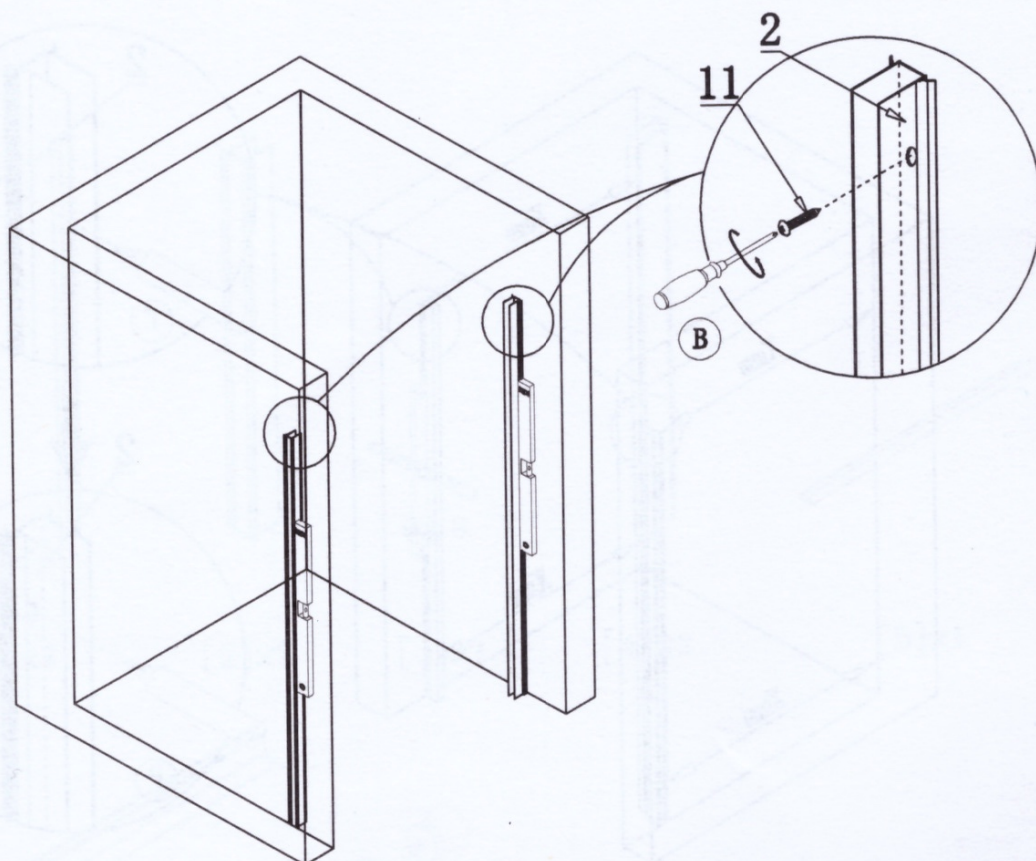


step4:

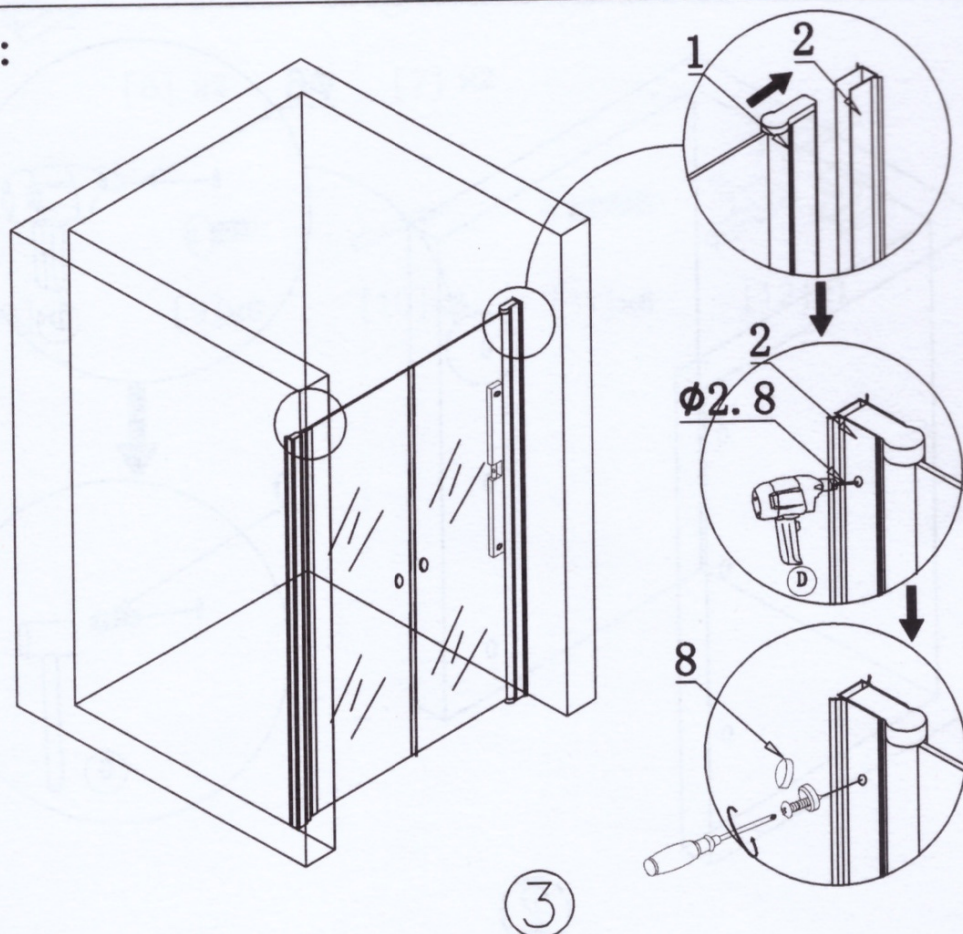


step 5

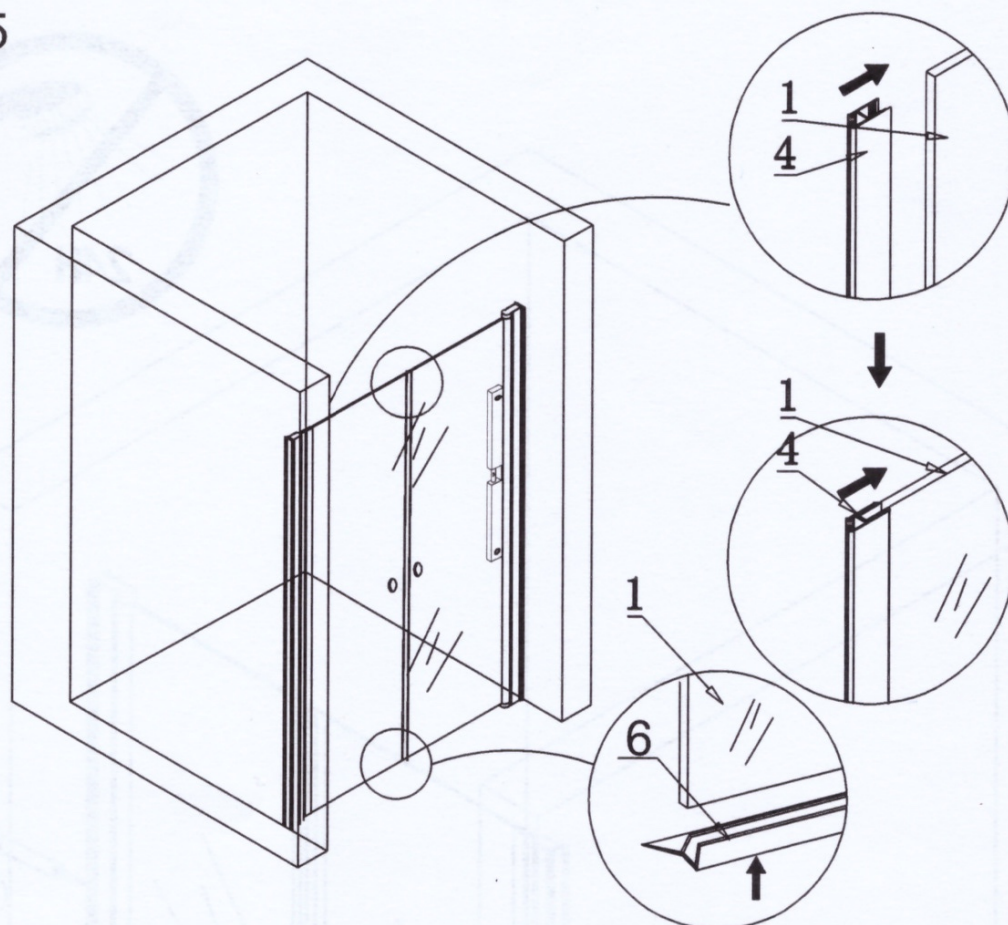

step 6

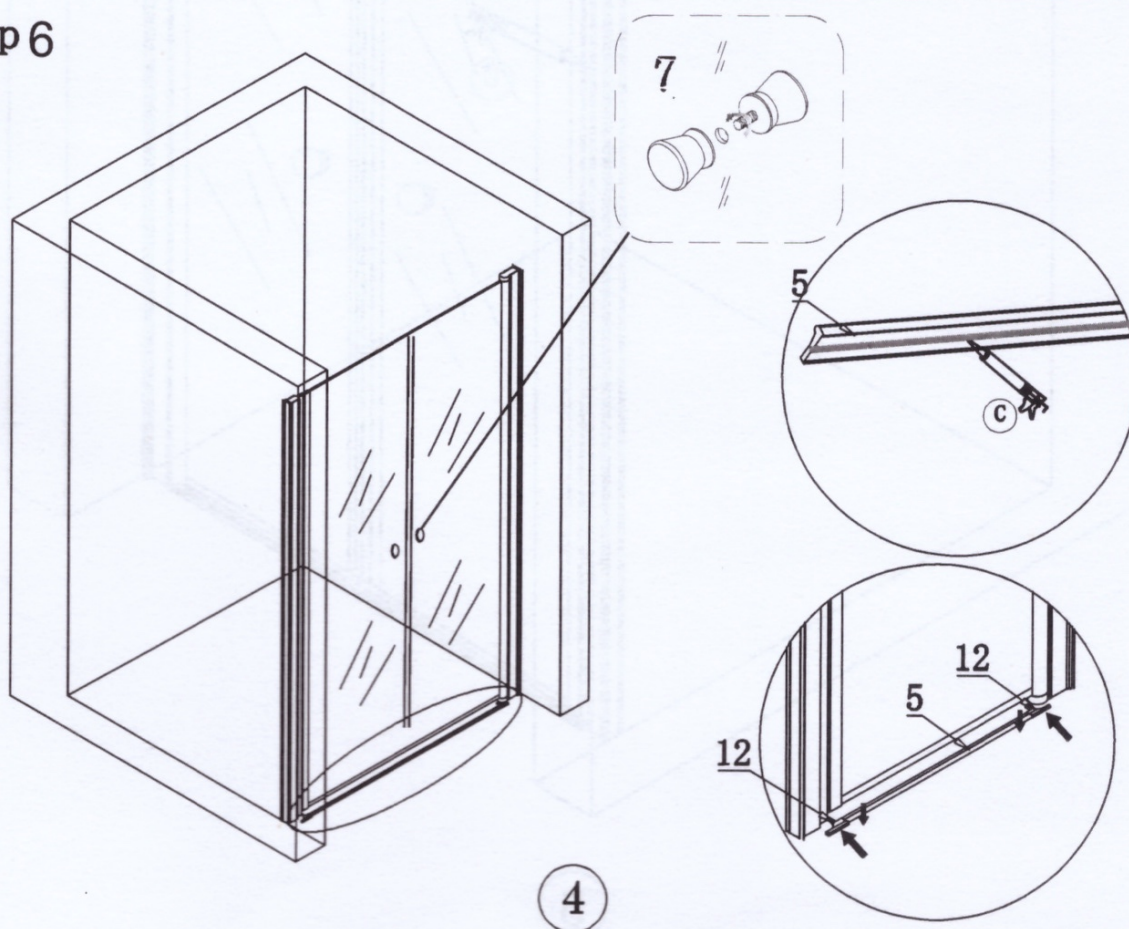

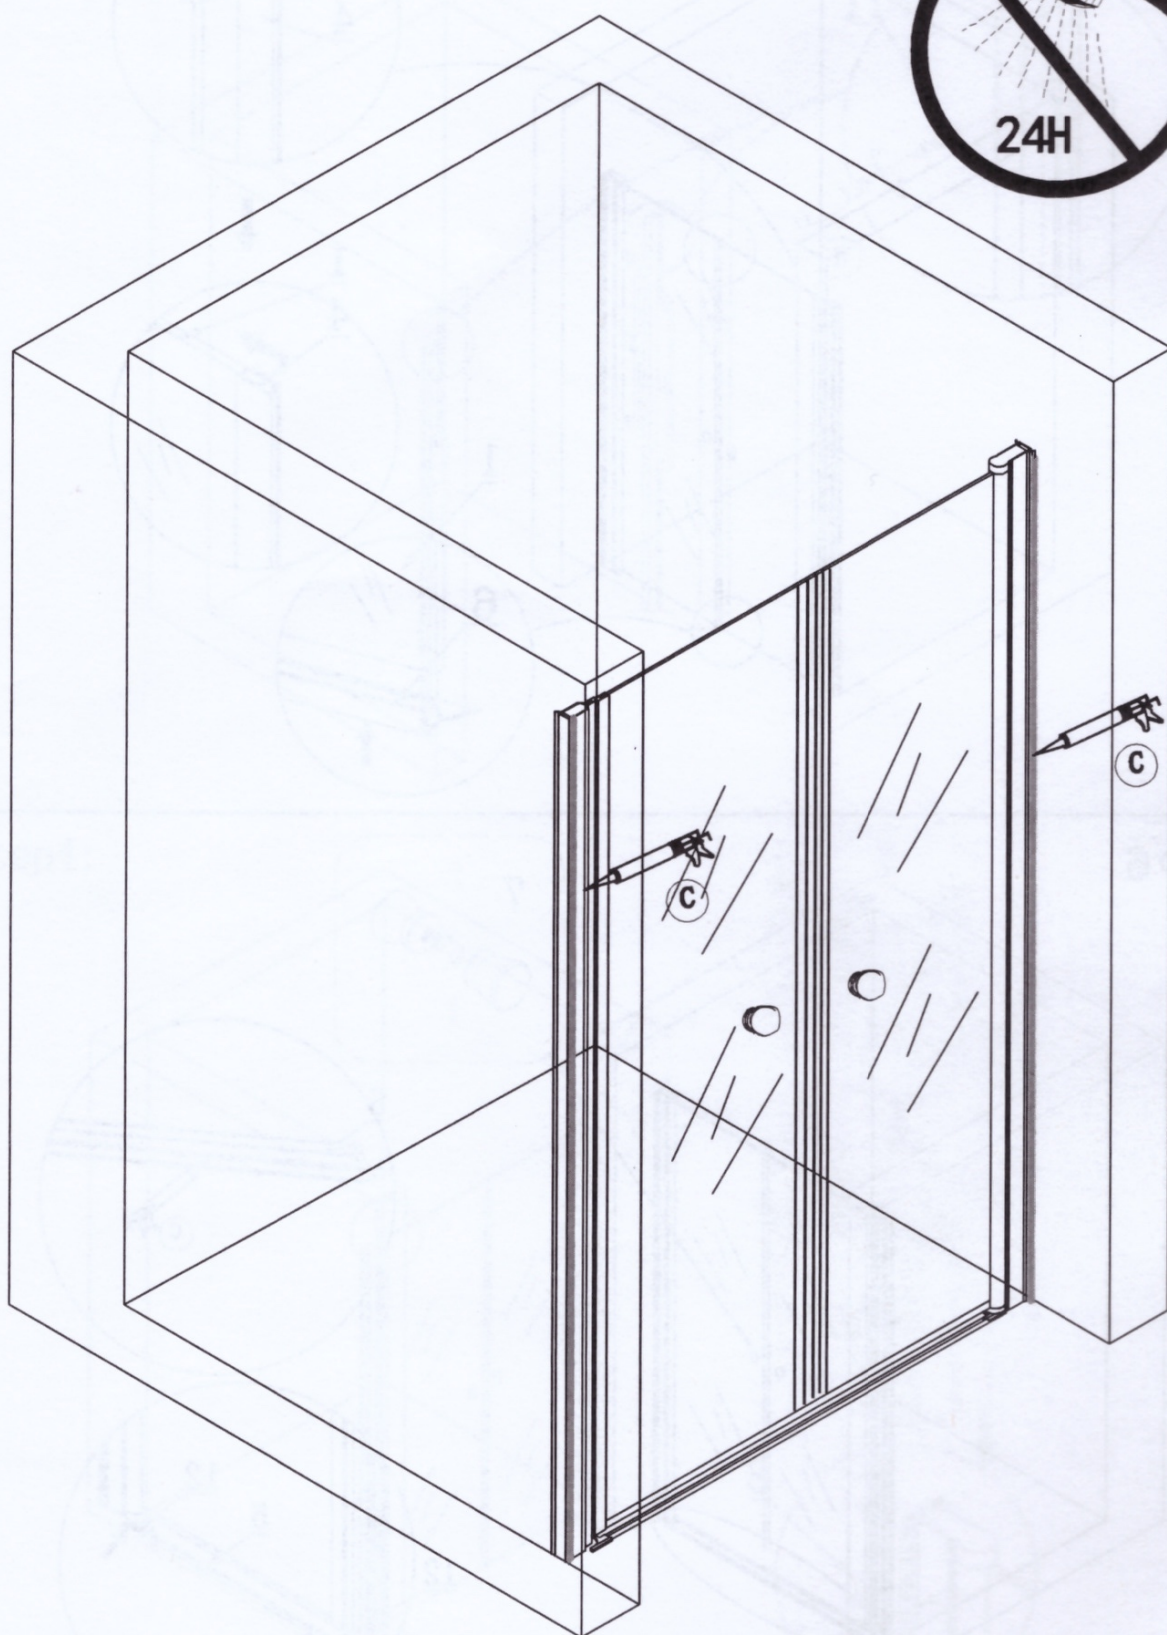

5